

FusionTV Remote Control Guide

Contact us at (319) 342-3369 or visit www.lpctel.com for more information.

TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

SETUP

Use for programming sequences of devices controlled by the remote.

SKIP FORWARD, SKIP BACK, REW, PLAY, FFWD, STOP, PAUSE, RECORD

In STB mode, these control the DVR functions. In other modes, these can control a VCR, DVD player or DVR.

> MENU Displays the menu.

GUIDE Opens the Interactive Program Guide.

DAY+/-

Jump ahead or back one day in the Interactive Program Guide.

RED, GREEN,

YELLOW, BLUE Access additional features on your set-top box.

VOL +/-Raise or lower the volume.

MUTE Turn the sound off or on.

FAV 1

View your favorite channels.

INPUT

In TV control mode, will change the input of the device you are controlling.



POWER

Turn on/off a selected device.

LIST

Display a list of recorded, future and series rules on your DVR.

LIVE

Return to watching live TV.

INFO

Display the current channel and program information. Press again for more detail.

BROWSE, SEARCH, ARROW AND OK

Navigate and select onscreen choices.

EXIT Exit the current screen.

PAGE+/-

Page up or down in menu screens and Interactive Program Guide.

CHANNEL +/-

Changes to the next higher or lower channel.

LAST

Recall the last channel you were watching.

NUMBER KEYS (0-9) Directly select a channel.



FusionTV DVR User Guide

Contact us at (319) 342-3369 or visit www.lpctel.com for more information.



LIST

Press List once to see the list of recorded programs. Press List a second time to see what is scheduled to be recorded. Press List a third time to access your Series Rules.

LIVE

Press Live to return to the current part of a live broadcast.

SKIP FORWARD

Skip forward 30 seconds while watching a recording or live TV.

SKIP BACK

Skip backward 10 seconds while watching a recording or while watching live TV.

FAST FORWARD

Fast forward through parts of a recording. Press multiple times to go forward faster.

PLAY

Begin or resume watching a recording. Also display/remove the status bar.

RECORD

Press to record a show.

PAUSE

Pause the program you are currently watching.

STOP

Stop watching a recording or stop a recording that is in progress.

REWIND

Rewind through parts of a recording. Press multiple times to rewind faster.

GUIDE

Access the program Guide. Press a 2nd time for alternate view.

ARROWS/BROWSE/SEARCH/OK

Press to navigate through the guides, menu options or to make selections.